 


Top plate replacement

Smiley Touch™

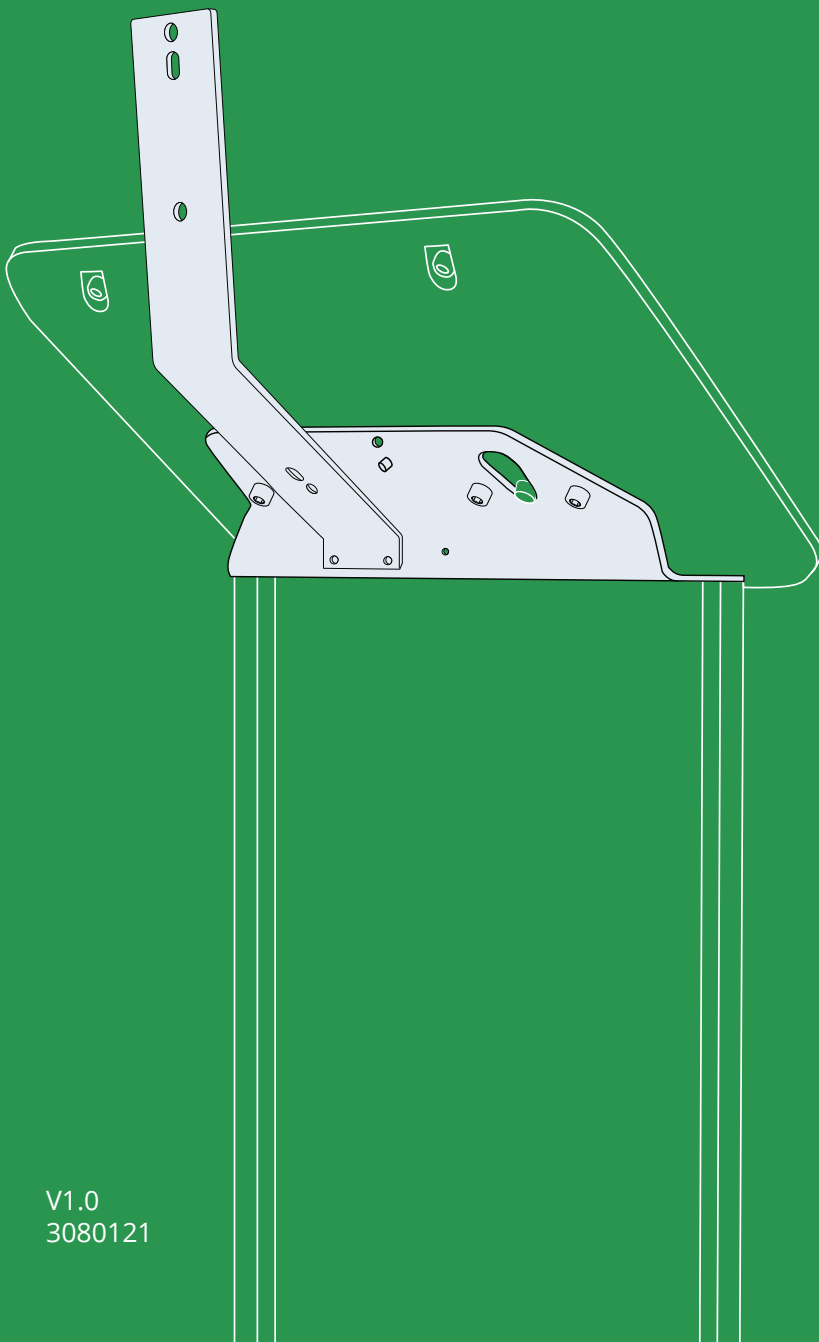

EN | ASSEMBLY GUIDE

DK | SAMLEVEJLEDNING

DE | MONTAGEANLEITUNG

ES | GUÍA DE MONTAJE

FR | GUIDE D'ASSEMBLAGE

IT | GUIDA AL MONTAGGIO

NL | MONTAGEHANDLEIDING

NO | MONTERINGSVEILEDNING

PL | INSTRUKCJA MONTAŻU






PT | GUIA DE MONTAGEM

FI | KOKOAMISOHJE

SV | MONTERINGSGUIDE



     1.

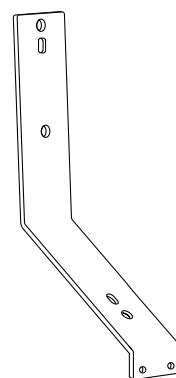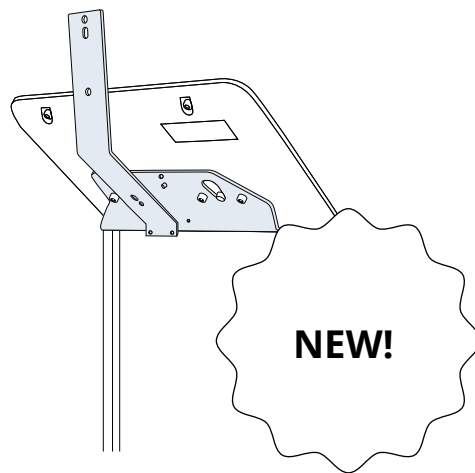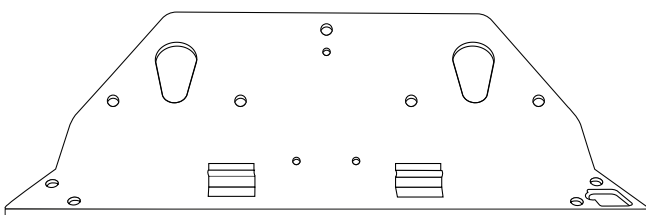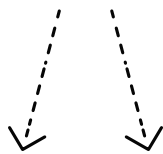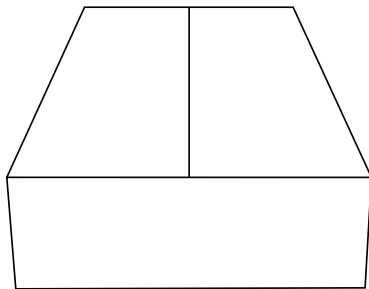

x 2



x 1

 
4 mm




x 1

T25


2.

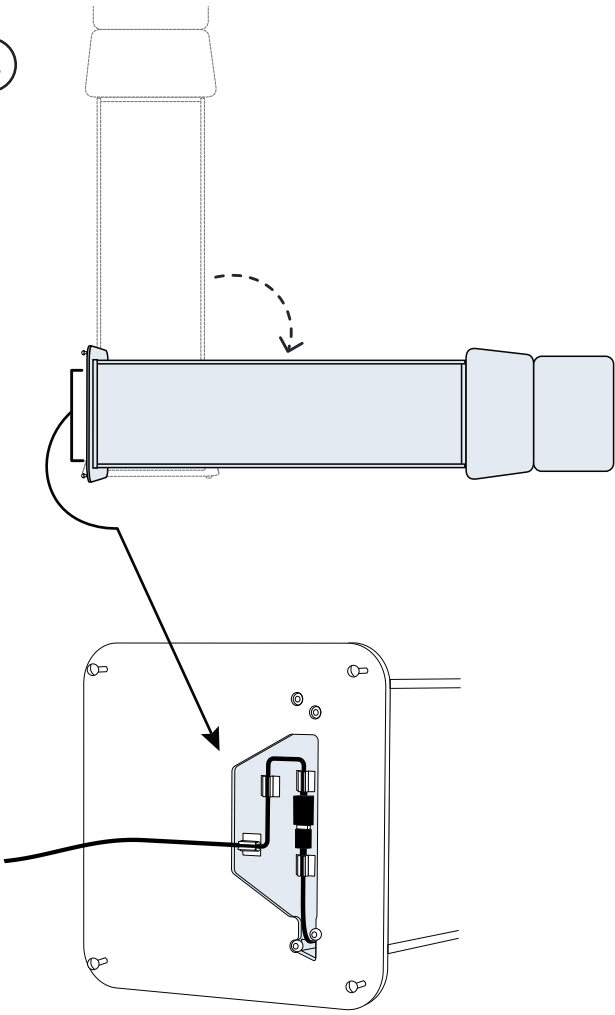

 
3.




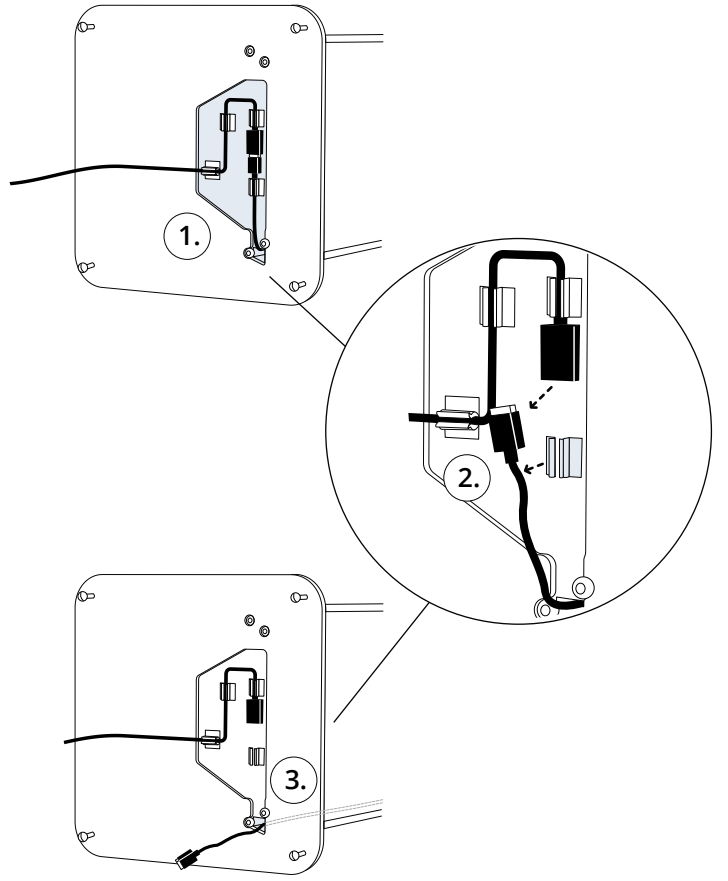


 4.

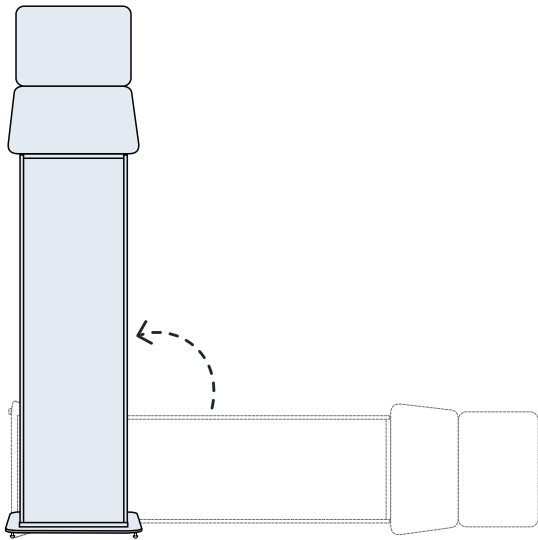


     5.

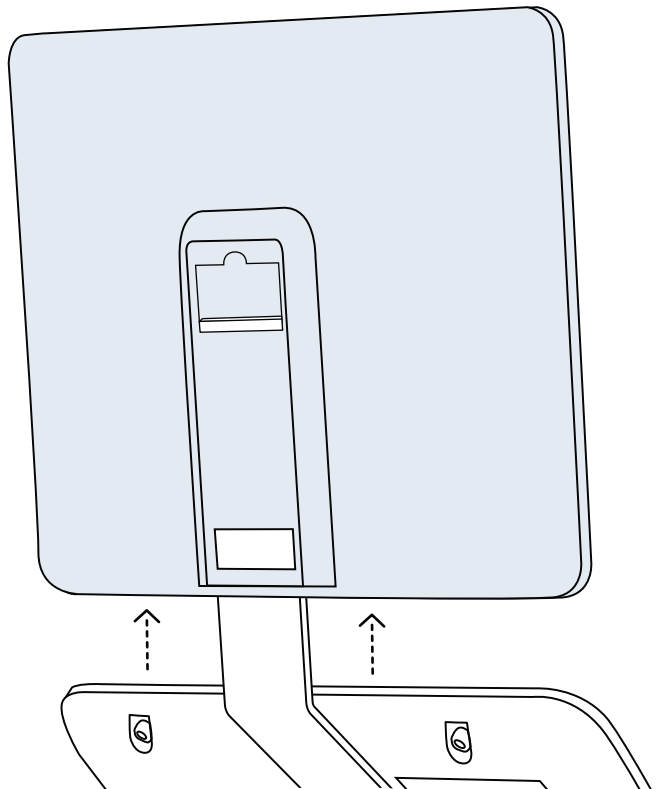


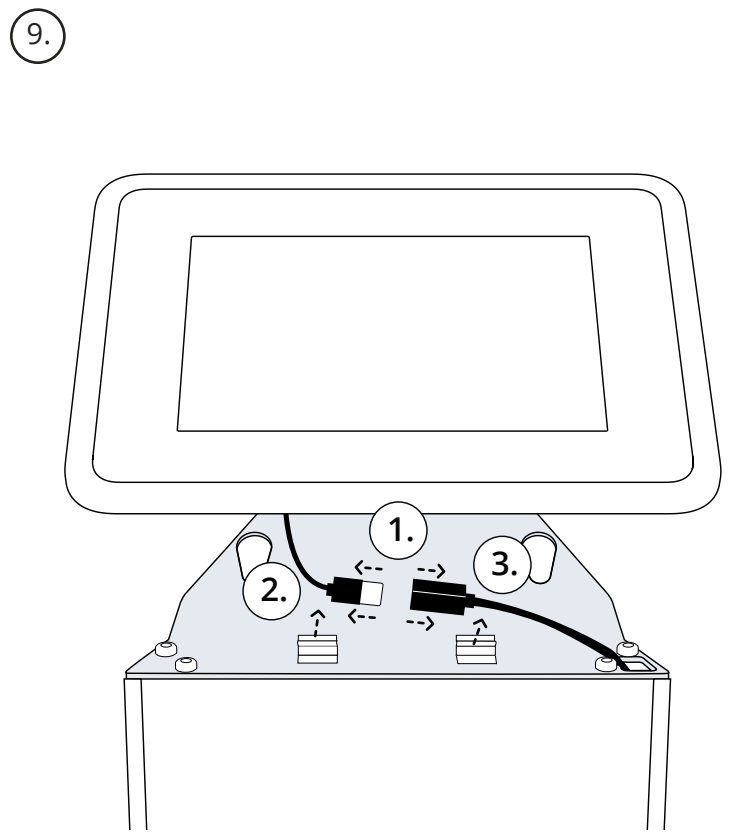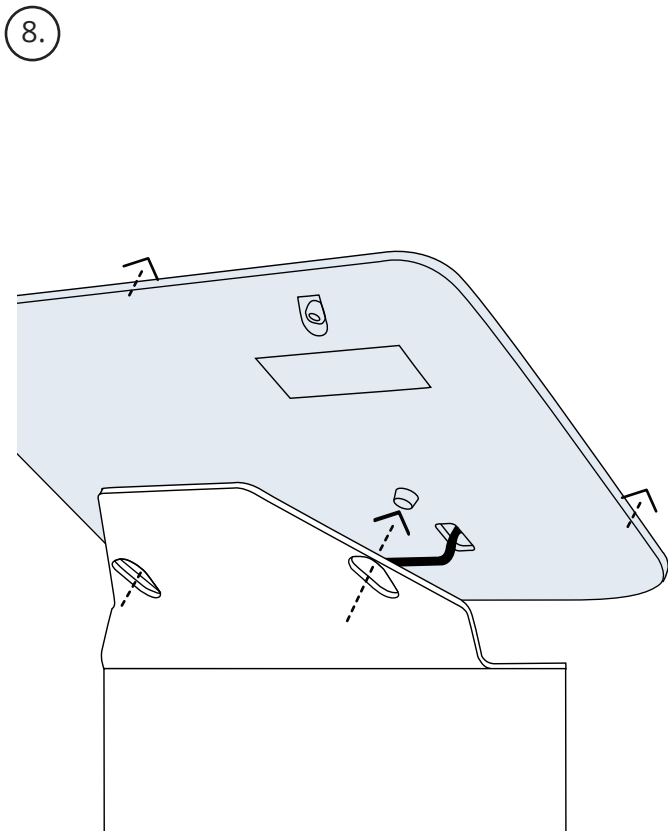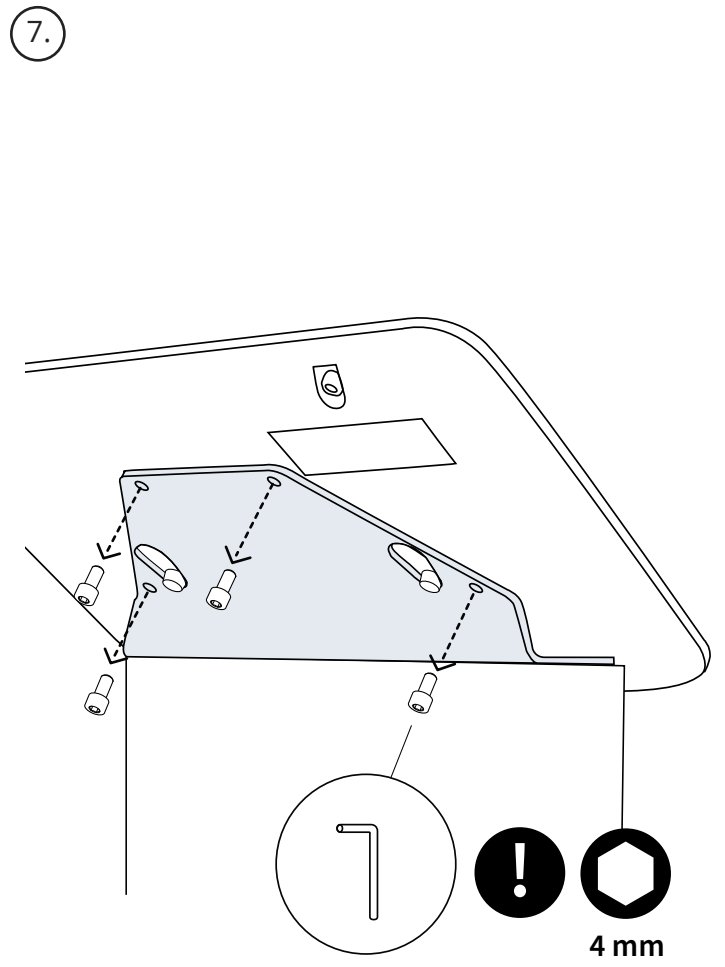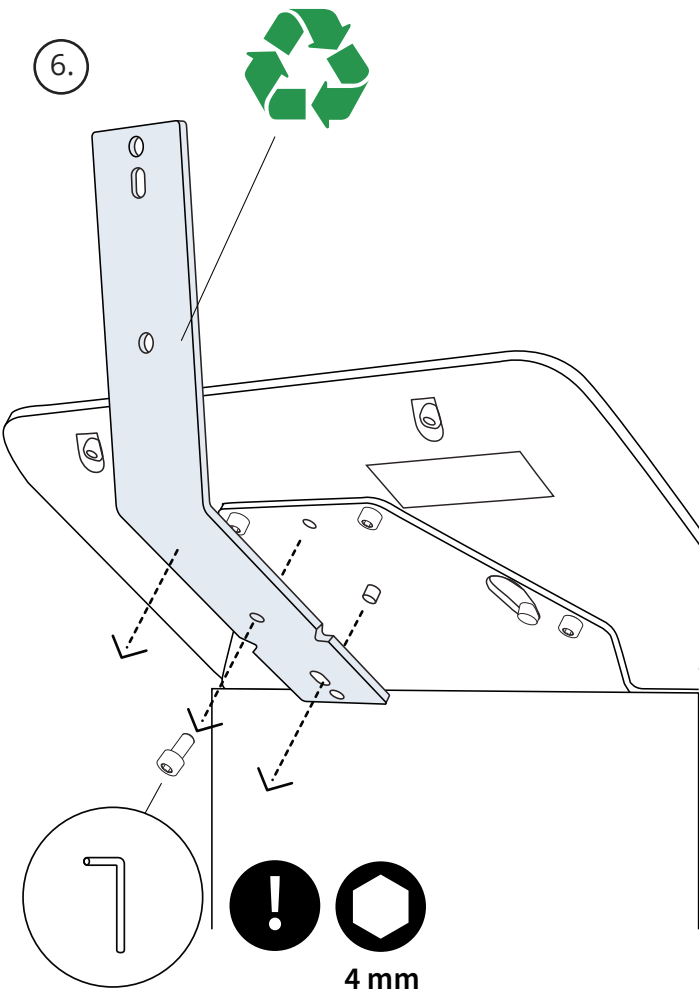

 
10.

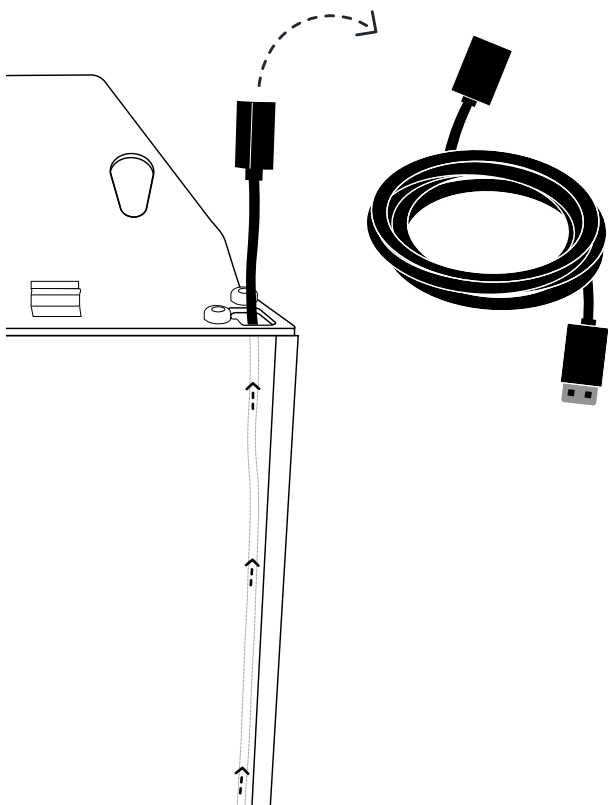

 
11.

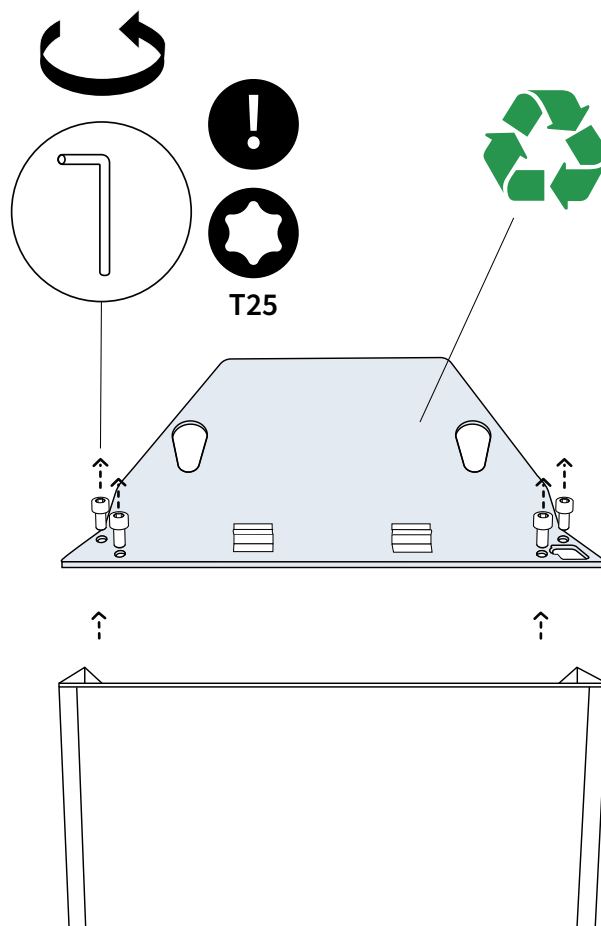

 
12.

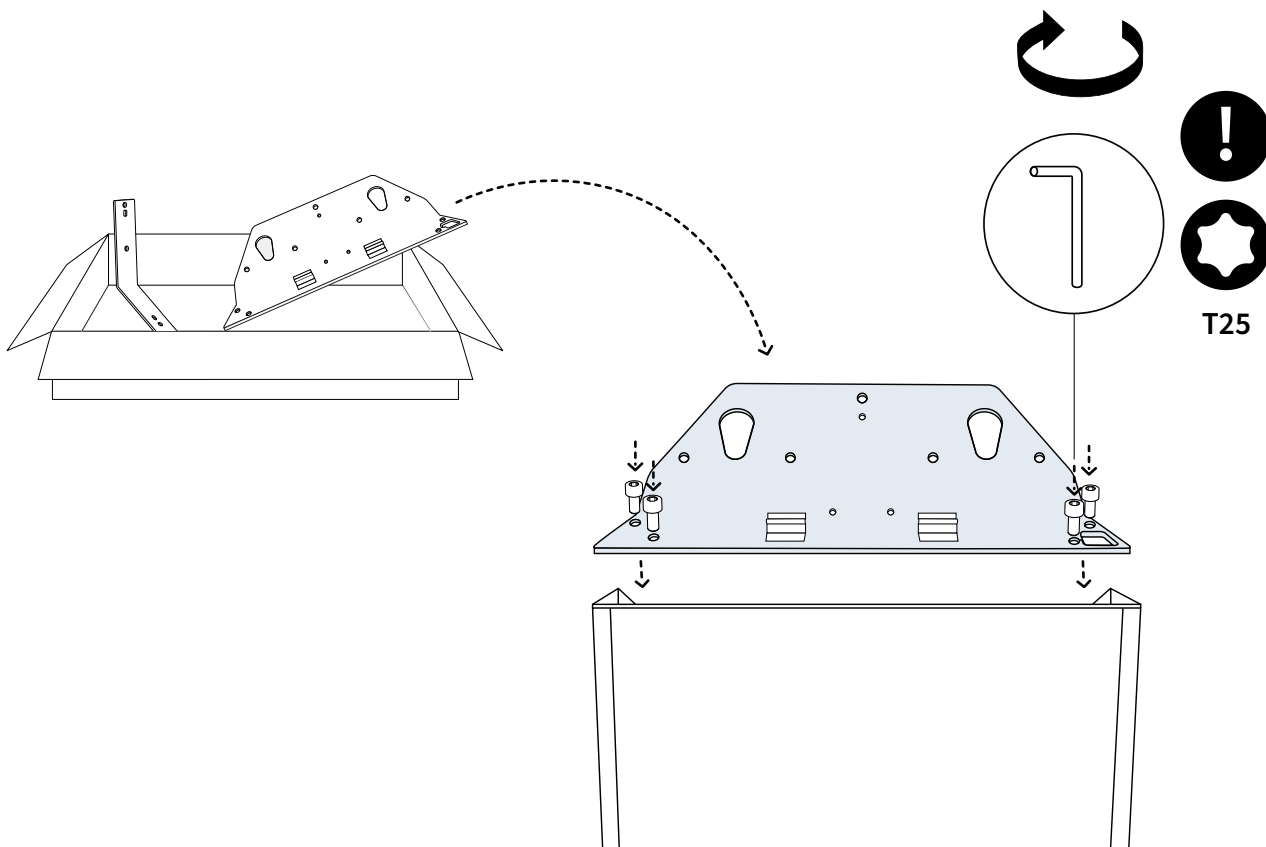

 
13.

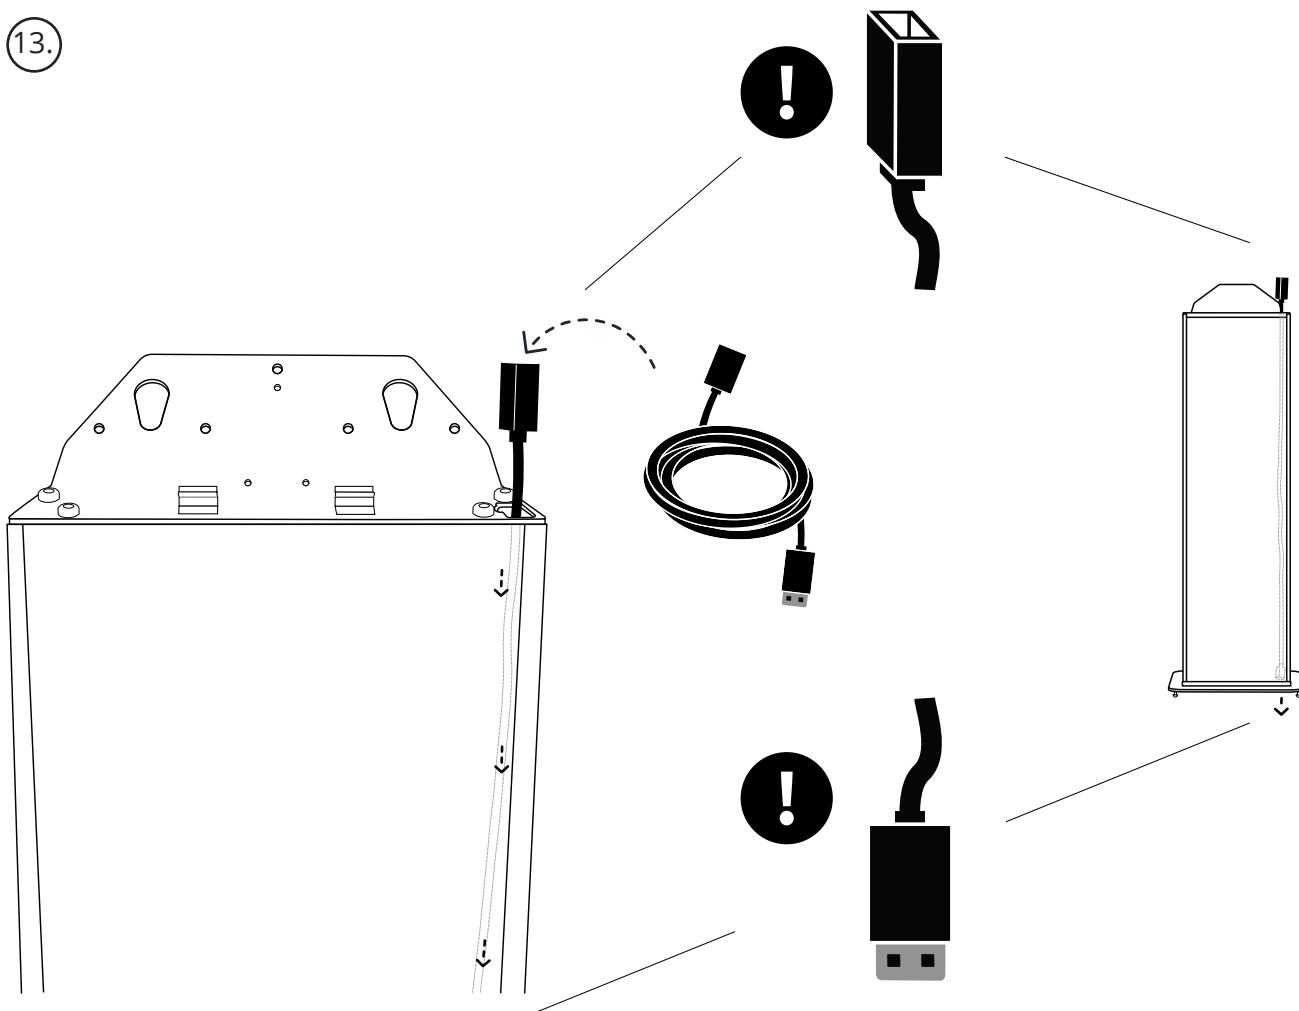

 
14.

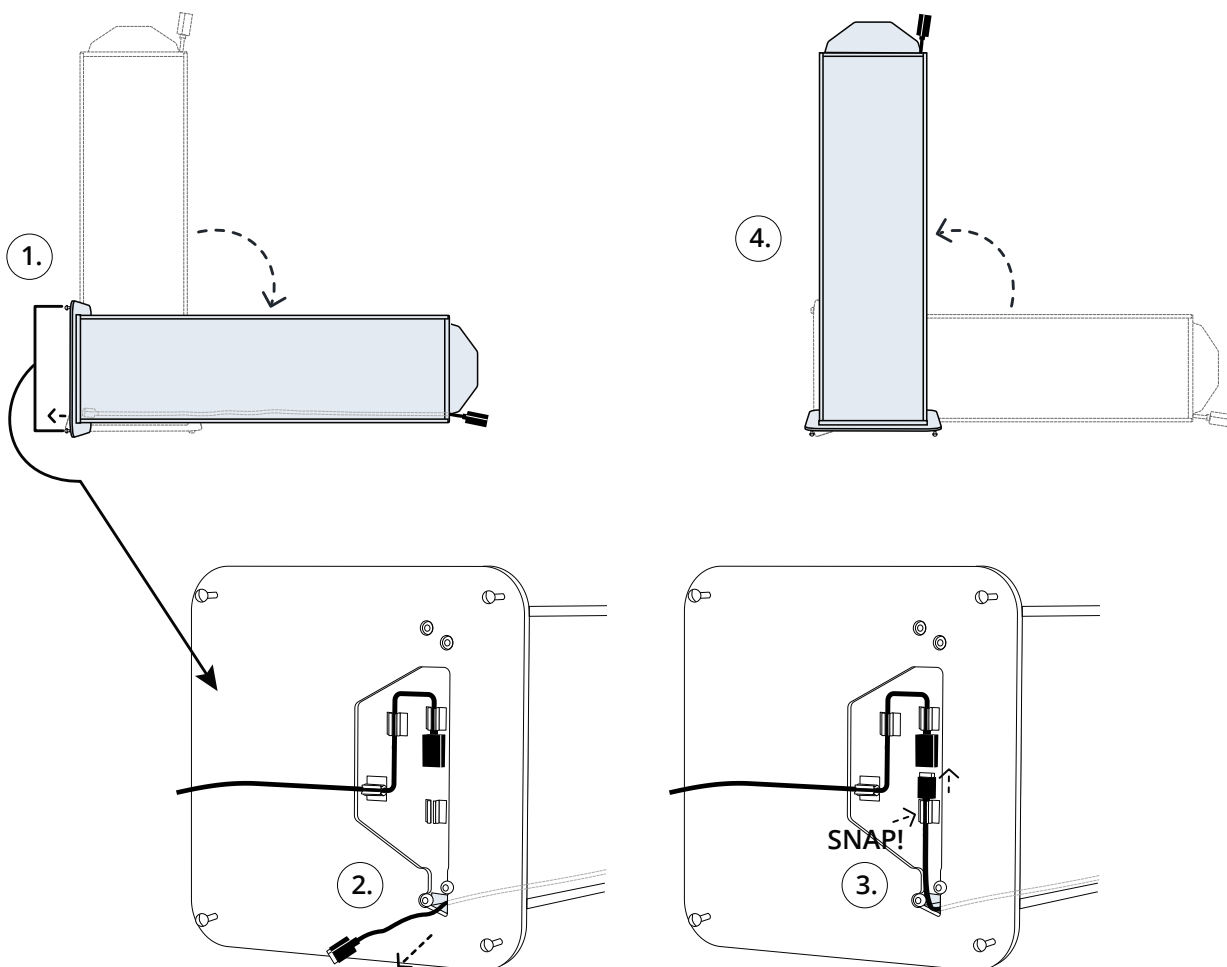

 
15.

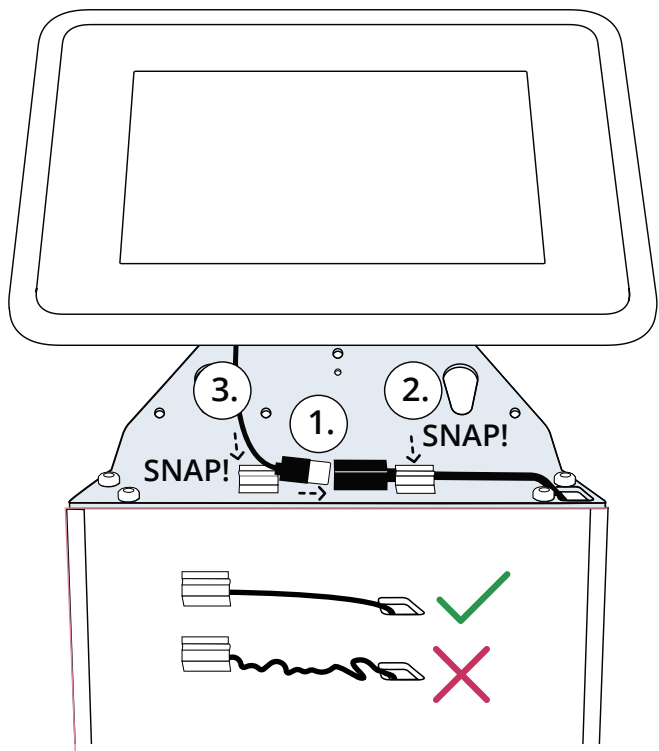

 
16.

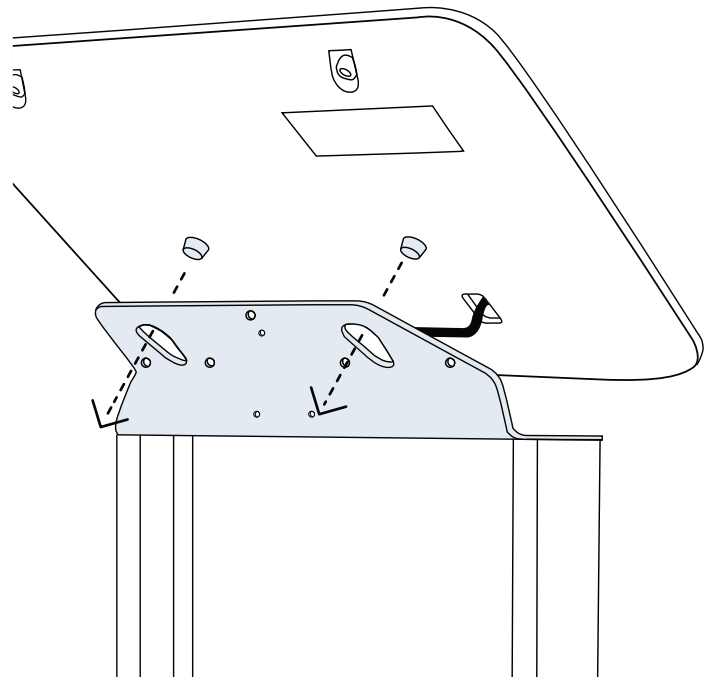

 
17.

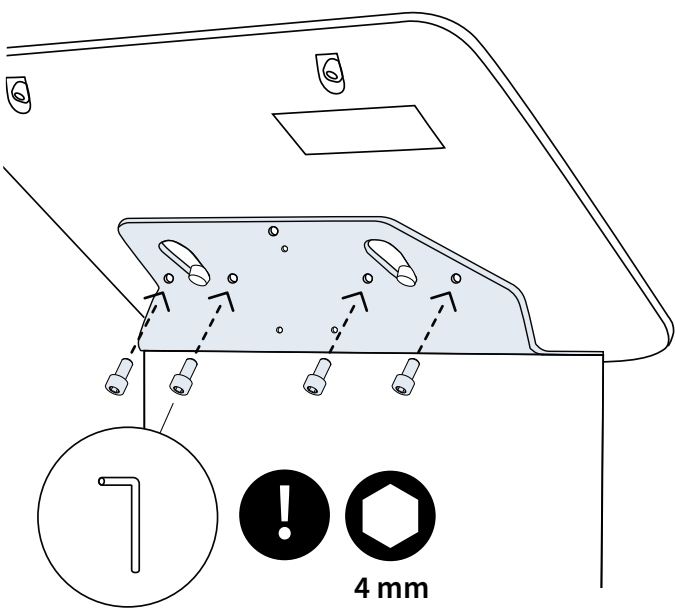

 
18.

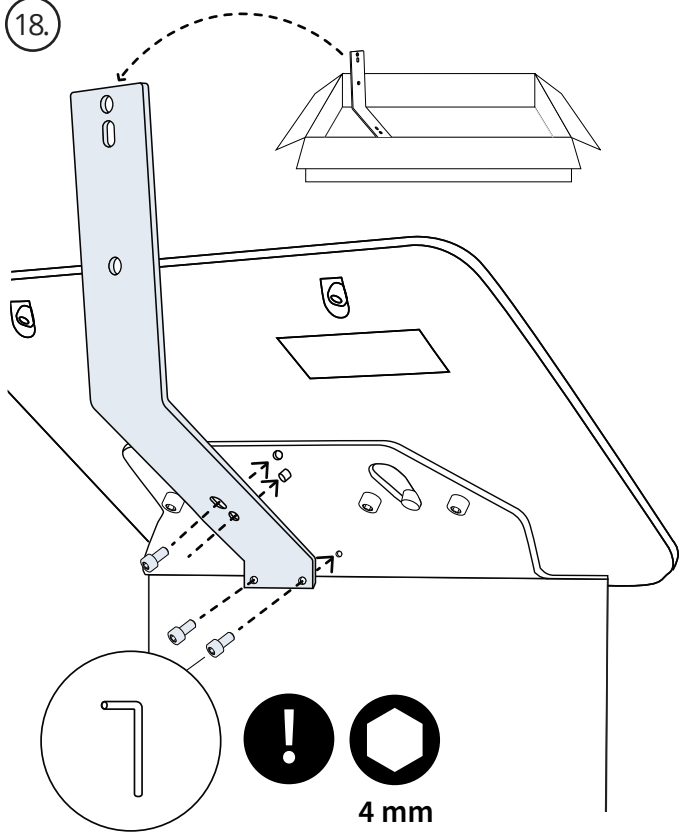

 19.

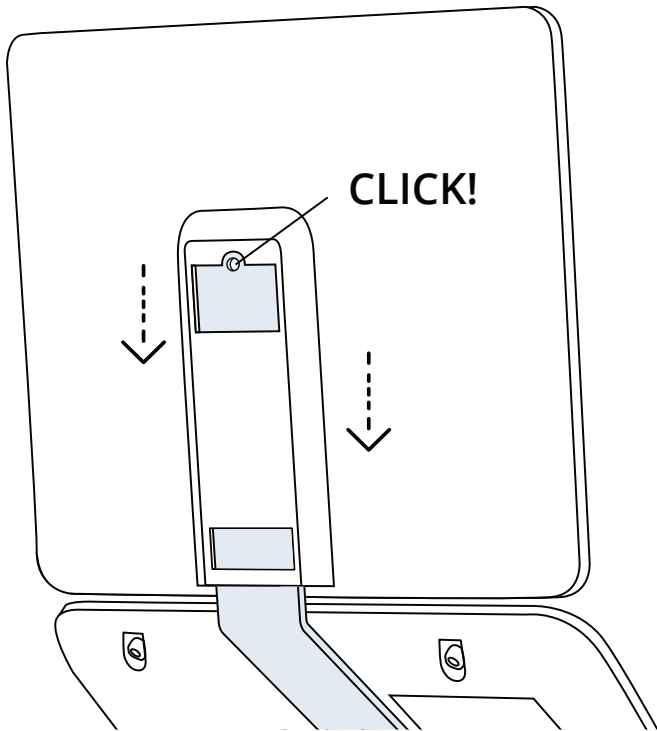

 20.

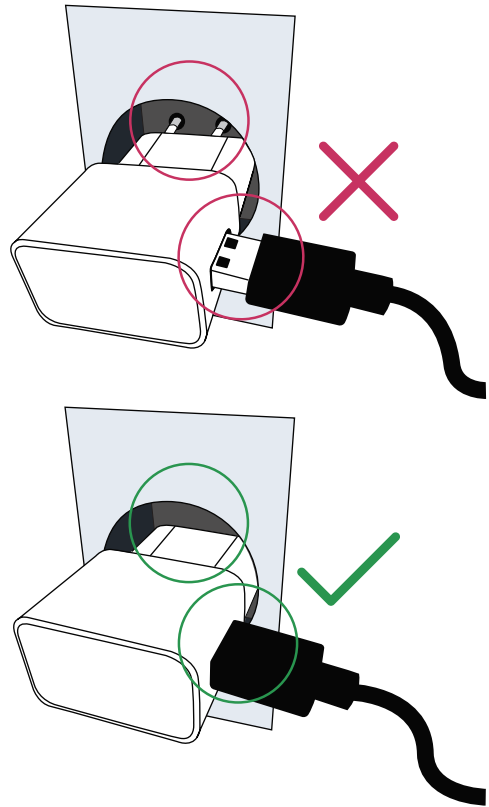

21.

